

SQUARE/RECTANGLE TABLE BASE

PARTS LIST

HARDWARE PARTS LIST

	DESCRIPTION	QTY	SIZE (L x W)			DESCRIPTION	QTY	SIZE (L x W)	
A	MOUNTING PLATE	1	12" X 12"	000		FLAT HEAD SCREW	8	1 1/4" X 1/4"	
В	COLUMN	1	VARIES: 26 3/4" STANDARD HEIGHT 39 3/16" BAR HEIGHT	4 HOLE END 4 HOLE END	2	LEVELER	4	1" X 1"	
G	BASE	1	VARIES: 15" X 15" 18" X 18" 21" X 21" 15" X 23"						

TOOLS NEEDED

PHILLIPS SCREWDRIVER

SAFETY GLASSES






DIRECTIONS

- CHECK ALL PARTS PRIOR TO ASSEMBLY FOR PROPER QUANTITIES.
- INSPECT CONDITION OF ALL PARTS.
- CAREFULLY FOLLOW ATTACHED "ASSEMBLY DIAGRAM".
- SPECIAL NOTES/DETAILS WILL BE ILLUSTRATED OR EXPLAINED.


IF ANY ITEMS ARE FOUND TO BE MISSING OR DAMAGED, PLEASE CONTACT YOUR SALES REPRESENTATIVE FROM WHICH IT WAS PURCHASED OR NIULINE AT (602) 861-2828.

OIULINE SQUARE/RECTANGLE TABLE BASE

ASSEMBLY DIAGRAM

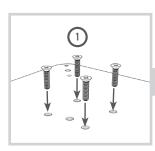


4 FLAT HEAD SCREWS SCREW THROUGH TOP PLATE IN 4 HOLES THAT FORM A "SQUARE" AND INTO THE COLUMN. MAKE SURE SCREWS ARE FLUSH.

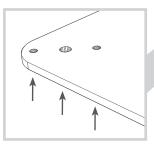

CUSTOMER TO USE OWN SCREWS WHEN MOUNTING BASE UNDER TABLE TOP.

SCREWS NOT PROVIDED BY NIULINE

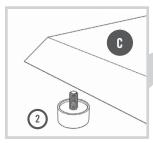

SCREW 4 LEVELERS INTO INSERT SLOTS ON BOTTOM OF BASE.

> REPEAT FOR ALL LEVELERS. ADJUST AS NECCESSARY.

> > SCREWS ARE FLUSH.

